

AIRWIRE T9000 Commands

Add/Run Loco Ln	# nnnn #
Set Speed Steps	#,DIR, 1/2/3
Quick Stop	SEL DIR
Show Speed/direction	SHOW 0
Quick Stop	0
Exit show speed	*
Select Memory Loco	SHOW 1,#
Store Ln Run Changes	SEL 3
Delete Memory Loco	SHOW 3,#

Build and store Consist	SEL 2,1
Add 2nd loco (Lc)	nnnn, #
End and store	*
Edit Lc Direction	SEL 2,3
Change direction	DIR
Turn off F0-F4	0
Select/Run Consist	SHOW 2, #
Run selected consist	#
Insert/Overwrite Lc	SEL 2, 2
New Loco address	# nnnn #
Flip Consist & Rebuild	SEL 2, 3, #
Run Memory Consist	SHOW 2, #
Delete Memory Consist	SHOW 4, #
Store Consist run changes	SEL 4, #

Accessory Control	SEL 5
Enter address	#, nnnn, #
F1	Off, Reverse
F3	On, Normal
Exit, quit	*

Service Programming	SPr, SEL
Enter Cn	* n *
Enter Cn's value	# v #
Exit, quit	SPr

OPS Programming	OPr, SEL
Enter Cn	* n *
Enter Cn's value	# v #
Exit, quit	OPr

Select Standard Freq	SEL 1, n, #
Select New Drop-In Freq	SEL 0, nn, #
Reset to factory defaults	SEL 9, #

AIRWIRE T9000 Commands

Add/Run Loco Ln	# nnnn #
Set Speed Steps	#,DIR, 1/2/3
Quick Stop	SEL DIR
Show Speed/direction	SHOW 0
Quick Stop	0
Exit show speed	*
Select Memory Loco	SHOW 1,#
Store Ln Run Changes	SEL 3
Delete Memory Loco	SHOW 3,#

Build and store Consist	SEL 2,1
Add 2nd loco (Lc)	nnnn, #
End and store	*
Edit Lc Direction	SEL 2,3
Change direction	DIR
Turn off F0-F4	0
Select/Run Consist	SHOW 2, #
Run selected consist	#
Insert/Overwrite Lc	SEL 2, 2
New Loco address	# nnnn #
Flip Consist & Rebuild	SEL 2, 3, #
Run Memory Consist	SHOW 2, #
Delete Memory Consist	SHOW 4, #
Store Consist run changes	SEL 4, #

Accessory Control	SEL 5
Enter address	#, nnnn, #
F1	Off, Reverse
F3	On, Normal
Exit, quit	*

Service Programming	SPr, SEL
Enter Cn	* n *
Enter Cn's value	# v #
Exit, quit	SPr

OPS Programming	OPr, SEL
Enter Cn	* n *
Enter Cn's value	# v #
Exit, quit	OPr

Select Standard Freq	SEL 1, n, #
Select New Drop-In Freq	SEL 0, nn, #
Reset to factory defaults	SEL 9, #

AIRWIRE T9000 Commands

Add/Run Loco Ln	# nnnn #
Set Speed Steps	#,DIR, 1/2/3
Quick Stop	SEL DIR
Show Speed/direction	SHOW 0
Quick Stop	0
Exit show speed	*
Select Memory Loco	SHOW 1,#
Store Ln Run Changes	SEL 3
Delete Memory Loco	SHOW 3,#

Build and store Consist	SEL 2,1
Add 2nd loco (Lc)	nnnn, #
End and store	*
Edit Lc Direction	SEL 2,3
Change direction	DIR
Turn off F0-F4	0
Select/Run Consist	SHOW 2, #
Run selected consist	#
Insert/Overwrite Lc	SEL 2, 2
New Loco address	# nnnn #
Flip Consist & Rebuild	SEL 2, 3, #
Run Memory Consist	SHOW 2, #
Delete Memory Consist	SHOW 4, #
Store Consist run changes	SEL 4, #

Accessory Control	SEL 5
Enter address	#, nnnn, #
F1	Off, Reverse
F3	On, Normal
Exit, quit	*

Service Programming	SPr, SEL
Enter Cn	* n *
Enter Cn's value	# v #
Exit, quit	SPr

OPS Programming	OPr, SEL
Enter Cn	* n *
Enter Cn's value	# v #
Exit, quit	OPr

Select Standard Freq	SEL 1, n, #
Select New Drop-In Freq	SEL 0, nn, #
Reset to factory defaults	SEL 9, #